

HUCK BOLTS USED IN CROSSINGS AND JOINTS

FB CWR TIGHT JOINT



RAIL TYPE	PART NUMBER
RAILTRACK FLAT BOTTOM	STUD
	57-150998 NUT
	SPACER
	57-150900 COLLAR
RAILTRACK BULL HEAD	STUD
	57-150998 NUT
	SPACER
	57-150900 COLLAR
	*SEE NOTE

NOTE: Spacer is intended to give clearance between nose of installation tool and rib of fishplate or lip of keep plate. May not be needed in all situations.

**Alcoa Huck
Fastening
Systems**



ALCOA
Constant Technology